
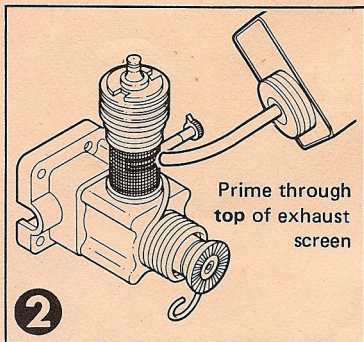


# INSTRUCTION SUPPLEMENT Engine Disassembly

This sheet supersedes the enclosed instruction manual regarding engine disassembly.

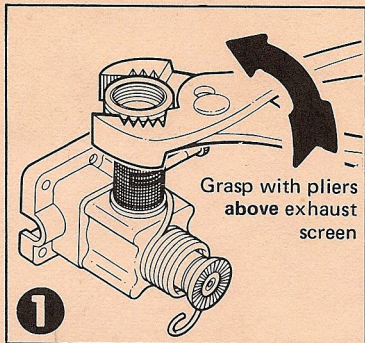

This engine comes equipped with an exhaust screen.

## **Removing Glow Head**

Use Cox wrench from accessory kit to remove glow head. If cylinder turns with glow head, hold cylinder with pliers above exhaust screen. Do not grip tighter than needed or cylinder may be damaged.

## **To Remove Cylinder from Crankcase (See Illustration No. 1)**

Do not attempt to use Cox wrench by placing over exhaust ports or engine screen will be damaged. Use pliers to grip top of cylinder and turn counterclockwise for loosening. Do not grip tighter than needed.

## **To Prime Engine (See Illustration No. 2)**

Disconnect glow plug clip before priming engine. Prime engine at top of exhaust screen for fuel to reach exhaust ports.

## **Cleaning Procedures**

If dirt or debris collects on the engine screen, remove cylinder from glow plug and crankcase and wash screen & cylinder with any non-flammable solvent. Dry and oil before reassembly.